# How to boot up a Morello Board with CheriBSD

Carlos Molina-Jiménez<sup>1</sup>

Department of Computer Science and Technology, University of Cambridge carlos.molina@cl.cam.ac.uk, www.cl.cam.ac.uk/~cm770/ 26 Aug 2022

**Resumen** This document explains how to boot a brand new Morello Board with the CheriBSD operating system.

Keywords: Independent computations · Security

# 1. Introduction

ARM has sent me two Morello Boards to carry out the implementation work involved in the CAMB project. See photo in Fig. 1.

The Morello Boards are brand new, in the sense that they come with no pre-installed software. For instance, they have no operating systems on their internal 250 GB SATA disks. My research work is based on CHERI capabilities, therefore, I need to install CheriBSD operating system on their local disks.

In the following sections I will explain the procedure that I have followed to set up one of the Morello Boards. I followed the same procedure to set up the second Morello Board.

The general setup procedure is explained in ARM [3] and in a video (Morello: Getting Started Guide) [2]. The setup with CheriBSD is explained in [7].

In this document I am sharing my personal experience and discussing some details that [3,2,7] omit.

## 2. Equipment

I have the Morello Board with all the cables as normally shipped by ARM [3] and in addition, following ARM recommendations, I have:

- Host PC: an x8664 PC running Ubunto Linux 18.04, 16GB of memory, 250GB of free disk space and monitor with HDMI input support for at least 1920x1080 at 60Hz.
- SamDisk 64GB 3.0 memory stick. ARM recommends old memory sticks of least 4GB, but new ones worked fine.



 ${\bf Figura 1.}\ {\rm My}\ {\rm two}\ {\rm brand}\ {\rm new}\ {\rm Morello}\ {\rm Boards}.$ 

### 3. The main two steps

In general, the procedure involves two related but independent steps.

- 1. Creation of a bootable USB memory stick with a CheriBSD boot image.
- 2. Upgrade of the internal SDcard of the Morello Board with the latest version of the Morello Board firmware.

The order of the steps is irrelevant, that it, one can first upgrade the SDcard and then create the bootable USB memory stick or the other way around. I will start with the creation of the bootable memory stick because this step does not involve the Morello Board, it only involves the host PC.

### 4. Creation of a bootable USB memory stick

ARM recommends a USB memory stick of at least 4GB. I used a conventional SamDisk 64GB 3.0 memory stick and experimented with others including Phillips and Verbatim. I remark on this point because it seems that some people have experienced problems to boot Morello Boards with some memory sticks. I used several brands and all of them worked fine for me.

To create my bootable memory stick, I executed the following steps.

- 1. I downloaded an installable CheriBSD image for the Morello Board from [4].
  - Another alternative is to create an image as explained in [7]. However, to start with a ready to use image is a better approach, the creation of an image might take between 2 and 3 hours of compilation which involves downloads of hundreds of dependencies. This is a time consuming procedure that might crash several times.
- 2. I uncompressed the downloaded image.

```
$ ls -1
-rw-r--r-@ 1 carlosmolina staff 426130916 27 Aug 13:26
cheribsd-memstick-arm64-aarch64c-22.05p1.img.xz
bash-3.2$ gunzip cheribsd-memstick-arm64-aarch64c-22.05p1.img.xz
bash-3.2$ ls -1
-rw-r--r- 1 carlosmolina staff 814955008 27 Aug 13:26
cheribsd-memstick-arm64-aarch64c-22.05p1.img
```

3. I plugged a 64GB USB memory stick to a USB port of my Ubunto PC and run the Linux *lsblk* command to identify the device driver that Ubunto used to attach the USB memory stick.

\$ lsblk 0 465.8G sdb 8:16 0 disk sdb1 8:17 0 465.8G 0 part /camb sdc 8:32 1 58.2G 0 disk sr0 11:0 1 1024M 0 rom

The *lsblk* output shows that there is a storage device of 58.2G connected to *sdc*. That is the USB memory stick. If not sure, what device is the USB memory stick, you can unplug it and run *lsblk* again, the *sdc* device will not be shown in the output. Plug it and run *lsblk* again and it will be shown in the output again. Make sure you do not specify the wrong device to the *dd* command output (of = /dev/...) because *dd* will write on top of the original content.

4. I copied the uncompressed image to the memory stick using the standard dd Linux command

```
[sudo] password for cm770:
777+1 records in
777+1 records out
814955008 bytes (815 MB, 777 MiB) copied, 46.1821 s, 17.6 MB/s
```

In this example, I used a Verbatim USB 3.2 Gen 1, V3 Drive, 64GB. I experimented also with several USBs (SanDisk USB 3.0, 64GB, Philips USB 2.0, 32GB and Kingston USB 3.2, 64GB) —all worked fine for me. The only difference is the time it takes the *dd* command to copy the image to the USB memory stick which is always less than a minute.

5. The USB bootable memory stick is now ready to boot the Morello Board up.

# 5. Upgrade of internal SDcard of the Morello Board with the latest firmware

Morello boards are shipped with SDcards flashed with an old firmware. ARM strongly recommends to delete it and replace it with the latest version of Morello Board firmware.

- 1. I downloaded the latest version of the Morello Board from [1].
  - Alternatively, as explained in [3] one can compile locally version of the firmware from the sources which are available from Git. However, to start with, it is sensible to download a ready to use firmware.
- 2. I plugged one end of the USB–B cable into the debug (DBG) port on the Morello Board and the other end to a USB port of the Ubunto PC.

3. I turned on the Morello Board.

```
• The internal SDcard of the Morello Board is taken as a conventional
 storage divice by the Ubunto PC. Therefore it is accessible through the
 Ubunto graphical interface. I clicked on its icon to open it. It contains
 some files and folders.
 bash-3.2$ ls -la
 total 48
 drwxr-xr-x 10 carlosmolina staff
                                       320
                                            9 Jun 00:03 ./
              5 carlosmolina staff
                                       160 28 Jul 20:32 ../
 drwxr-xr-x
                                      8196 24 Jul 23:06 .DS_Store
 -rw-r--r--@ 1 carlosmolina staff
                                       128 8 Jun 23:39 .Trash-3319/
               4 carlosmolina staff
 drwxr-xr-x
                                       192 17 Jul 02:02 LICENSES/
 drwxr-xr-x
               6 carlosmolina staff
 -rw-r--r--@ 1 carlosmolina staff
                                       935 1 Jan 2016 LOG.TXT
 drwxr-xr-x
               4 carlosmolina staff
                                       128 17 Jul 02:01 MB/
 drwxr-xr-x
               5 carlosmolina staff
                                       160 14 Feb
                                                   2022 SOFTWARE/
 -rw-r--r--@ 1 carlosmolina staff
                                      1203
                                            2 Feb
                                                    2022 config.txt
 -rw-r--r--@ 1 carlosmolina staff
                                       215
                                            2 Feb
                                                   2022 ee0364b.txt
```

These files and folders are the Morello Board firmware that ARM loaded at manufacturing time. This firmware is very likely to be outdated, therefore, ARM strictly recommend to delete them and flash the SDcard with the latest version.

In principle, I could have used Ubunto's graphical interface to treat the SDcard as a conventional memory stick: open it, move all the files and folder to the bin and copy the new ones into the SDcard. However, I opted to follow the directions from the ARM documents, therefore, I used Linux online commands, including, *mount* and *umount*.

4. I used the *lsblk* Linux command to identify the device that Ubunto uses to interact with the SDcard.

\$	lsblk
----	-------

NAME	MAJ:MIN	RM	SIZE	RO	TYPE	MOUNTPOINT
loop0	7:0	0	47M	1	loop	/snap/snapd/16292
loop5	7:5	0	47M	1	loop	/snap/snapd/16010
sda	8:0	0	223.6G	0	disk	
sda1	8:1	0	37.3G	0	part	
sda2	8:2	0	37.3G	0	part	/
sda3	8:3	0	149.1G	0	part	/local/scratch
sdb	8:16	0	465.8G	0	disk	
sdb1	8:17	0	465.8G	0	part	/camb
sdc	8:32	1	1.9G	0	disk	
sdc1	8:33	1	1.9G	0	part	/media/cm770/M1SDP
sr0	11:0	1	1024M	0	rom	

The SDcard corresponds to the sdc1 Ubunto device. I could identify it by its size. The Morello Boards that ARM shipped to me come with SDcards of 2GB. Therefore, /dev/sdc1 corresponds to the SDcard.

5. I mounted the SDcard into a folder of the Ubunto file system, for example, into /mnt (any empty folder can be used) and deleted all the files and folders:

```
$ sudo mount /dev/sdc1 /mnt
[sudo] password for cm770:
cm770@pursuit2:~$ cd /mnt
$ ls -l
total 224
-rwxr-xr-x 1 root root 1199 Aug 2 20:49 config.txt
-rwxr-xr-x 1 root root 215 Aug 2 20:49 ee0364b.txt
drwxr-xr-x 2 root root 32768 Aug 2 20:49 LIB
drwxr-xr-x 5 root root 32768 Aug 2 20:49 LICENSES
-rwxr-xr-x 1 root root 1104 Jan 1 2016 LOG.TXT
drwxr-xr-x 3 root root 32768 Aug 2 20:49 MB
drwxr-xr-x 2 root root 32768 Aug 2 20:49 SOFTWARE
```

6. I deleted the old version of the firmware from the SDcard.

 $\ \$  rm -R \* /\* delete all files and folders \*/

7. I copied the version of the firmware downloaded from [1] to the SDcard.

```
$ pwd
/camb/board-firmware-morello-mainline
$ ls -1
total 24
-rw-r--r-- 1 cm770 cm770 1199 May 20 09:35 config.txt
-rw-r--r-- 1 cm770 cm770 215 May 20 09:35 ee0364b.txt
drwxr-xr-x 2 cm770 cm770 4096 Jul 30 01:29 LIB
drwxr-xr-x 5 cm770 cm770 4096 Jul 30 01:29 LICENSES
drwxr-xr-x 3 cm770 cm770 4096 Jul 30 01:29 MB
drwxr-xr-x 2 cm770 cm770 4096 Jul 30 01:29 SOFTWARE
$ cp -R board-firmware-morello-mainline/* /mnt/
$ ls -1 /mnt
total 192
-rw-r--r-- 1 cm770 cm770 1199 Jul 25 00:55 config.txt
-rw-r--r-- 1 cm770 cm770 215 Jul 25 00:55 ee0364b.txt
drwxr-xr-x 2 cm770 cm770 32768 Jul 25 00:55 LIB
drwxr-xr-x 5 cm770 cm770 32768 Jul 25 00:55 LICENSES
drwxr-xr-x 3 cm770 cm770 32768 Jul 25 00:56 MB
drwxr-xr-x 2 cm770 cm770 32768 Jul 25 00:56 SOFTWARE
```

#### 

8. I umounted the SDcard from the Ubunto file system

\$ sudo umount /dev/sdc1

9. I have the SDcard ready now to be used as firmware to boot up the Morello Board, for example, with the USB bootable memory stick created in Section 4.

### 6. Booting up with the USB memory stick

The actual booting up process assumes that I have successfully:

- Upgraded the internal SDcard of the Morello board as detailed in Section 5.
- Created a bootable USB memory stick as detailed in Section ??.
- 1. I turned off the Morello Board.
- 2. I plugged one end of the HDMI cable into the HDMI port on the Morello Board and the other end into the monitor of the Ubunto PC,
- 3. I turned on the Morello Board.
- 4. I opened two serial connections between the Ubunto PC (my host PC) and the Morello Board. Each from an x-term running a *bash* shell.
  - I used *minicom* to setup the serial connections. *minicom* configuration is explained [5]. The directions to configure *minicom* within the context of the Morello Boards are provided in page 17 of [3].
  - Form an Ubunto x-term, open a serial connection between the Ubunto PC and the MCC port of the Morello Board. This terminal will work as the MCC console of the Morello Board.

\$ sudo minicom -d /dev/ttyUSB0

• From an Ubunto x-term open a serial connection between the Ubunto PC and the AP port of the Morello Board. This terminal will work as the AP console of the Morello Board.

\$ sudo minicom -d /dev/ttyUSB2

• I used an x-term to open the connections to match the terminal type specified to FreeBDS later at installation time. I have observed that a terminal type mismatch causes blurred output lines (nearly unreadable) from the configuration of the FreeBSD. Welcome to FreeBSD!

```
Please choose the appropriate terminal type for your system.
```

```
Common console types are:

ansi Standard ANSI terminal

vt100 VT100 or compatible terminal

xterm xterm terminal emulator (or compatible)

...

Console type [xterm]:
```

- 5. I plugged the bootable USB memory stick into one of the four USB ports located on the back of the Morello Board. Any of the four USB ports will work.
- 6. I turned the Morello Board on.
  - Some output were displayed on the MCC console.
- 7. I typed *reboot* from the MCC console.
- 8. I followed and responded to the outputs from the AP console, precisely, to the questions posed by the installation process of the FreeBSD.
  - The installation process asks for the network parameters to logically connect the Morello Board to the local network, such as IP host name, address, netmask, gateway and DNS servers. Get them from your network administrator and have them ready.

### 7. Conclusion and recommendation

The task is challenging if you have not configure a Morello Board before. This is an experimental hardware and therefore, the documentation is not well organised or complete. Fortunately, the ARM community forum is very keen to help [6].

Acknowledgements Carlos Molina has been supported by CAMB UKRI project  $(G115169)^1$ .

### Referencias

- ARM: Morello board-firmware. https://git.morello-project.org/morello/ board-firmware (2022), visited on 13 Aug 2022
- ARMlimited: Arm morello program. https://www.arm.com/architecture/cpu/ morello (2022)
- ARMlimited: Morello development platform and software version 1.0 getting started guide. https://developer.arm.com/documentation/den0132/latest/ (2022), visited on 6 Jun 2022
- 4. CherriBSD: Cheribsd. https://www.cheribsd.org (2022), visited on 13 Aug 2022
- 5. EMAC: Getting started with minicom. https://wiki.emacinc.com/wiki/ Getting\_Started\_With\_Minicom (2022), visited on 26 Aug 2022

<sup>&</sup>lt;sup>1</sup> For the purpose of open access, the author has applied a Creative Commons Attribution (CC BY) licence to any Author Accepted Manuscript version arising from this submission.

- 6. Support Forum: Arm community forum. https://community.arm.com/support-
- forums/f/morello-forum (2022), visited on 8 Oct 2022
  7. Watson, R.N.M., Davis, B.: Getting started with cheribsd. https://ctsrd-cheri.github.io/cheribsd-getting-started/ (2022), visited on 24 Jul 2022