

**DSI**

**MODEL R-1250  
WIDE RANGE RECEIVER  
INSTRUCTION MANUAL**

**DOCUMENT NUMBER**

**IM 469750B**

**March, 1985**

**DYNAMIC SCIENCES INCORPORATED**

© 1998

**REVISIONS**

**A - INITIAL RELEASE**

**B - Revision**

**DATE**

**SEPTEMBER 1983**

**March 1985**

**(THIS PAGE INTENTIONALLY LEFT BLANK)**

## **Table of Contents**

**Page**

### **SECTION I General Information**

|  |             |
|--|-------------|
| <b>1.1 Introduction</b>                  | <b>1-1</b>  |
| <b>1.2 Equipment Function</b>            | <b>1-1</b>  |
| <b>1.3 Equipment Description</b>         | <b>1-2</b>  |
| <b>1.4 Specifications</b>                | <b>1-4</b>  |
| <b>1.5 Ancillary Equipment</b>           | <b>1-9</b>  |
| <b>1.5.1 System Controller</b>           | <b>1-9</b>  |
| <b>1.5.2 Preselector</b>                 | <b>1-9</b>  |
| <b>1.5.3 Microwave Downconverter</b>     | <b>1-9</b>  |
| <b>1.5.4 Narrow Band Audio Processor</b> | <b>1-9</b>  |
| <b>1.5.5 Panoramic Display Unit.</b>     | <b>1-10</b> |
| <b>1.5.6 Portable Antenna Kit</b>        | <b>1-10</b> |
| <b>1.5.7 Wide Bandwidth Adapter</b>      | <b>1-10</b> |

### **SECTION II Installation**

|                                |             |
|--------------------------------|-------------|
| <b>2.1 Introduction</b>        | <b>2-1</b>  |
| <b>2.2 Inspection</b>          | <b>2-1</b>  |
| <b>2.3 Unpacking</b>           | <b>2-1</b>  |
| <b>2.4 Mounting</b>            | <b>2-5</b>  |
| <b>2.5 Connection</b>          | <b>2-5</b>  |
| <b>2.6 Data Interface</b>      | <b>2-8</b>  |
| <b>2.6.1 Predetection Gain</b> | <b>2-8</b>  |
| <b>2.6.2 Attenuation</b>       | <b>2-8</b>  |
| <b>2.6.3 Bandwidth Control</b> | <b>2-9</b>  |
| <b>2.6.4 Frequency Control</b> | <b>2-10</b> |
| <b>2.6.5 RF Gain</b>           | <b>2-10</b> |
| <b>2.6.6 AGC/Log/Lin</b>       | <b>2-11</b> |

### **SECTION III Operation**

|                                    |             |
|------------------------------------|-------------|
| <b>3.1 Introduction</b>            | <b>3-1</b>  |
| <b>3.2 Function Identification</b> | <b>3-1</b>  |
| <b>3.3 Initialization</b>          | <b>3-9</b>  |
| <b>3.4 Fault Indications</b>       | <b>3-13</b> |

### **SECTION IV Theory of Operation**

|  |             |
|--|-------------|
| <b>4.1 Introduction</b>                  | <b>4-1</b>  |
| <b>4.2 Functional Description</b>        | <b>4-1</b>  |
| <b>4.3 RF Section</b>                    | <b>4-9</b>  |
| <b>4.4 IF Section</b>                    | <b>4-13</b> |
| <b>4.5 Video Section</b>                 | <b>4-19</b> |
| <b>4.6 Synthesizer Section</b>           | <b>4-23</b> |
| <b>4.6.1 Main Local Oscillator</b>       | <b>4-23</b> |
| <b>4.6.2 Fixed Frequency Oscillators</b> | <b>4-29</b> |
| <b>4.7 Digital Section</b>               | <b>4-29</b> |
| <b>4.8 Power Section</b>                 | <b>4-34</b> |

**Table of Contents (Continued)****Page****SECTION V Service and Alignment**

|   |      |
|---|------|
| 5.1 Introduction                                  | 5-1  |
| 5.2 Maintenance Procedure                         | 5-1  |
| 5.3 Preventive Maintenance                        | 5-1  |
| 5.3.1 Periodic Maintenance                        | 5-1  |
| 5.3.2 Performance Test                            | 5-3  |
| 5.4 Disassembly                                   | 5-37 |
| 5.5 Field Service Adjustments                     | 5-40 |
| 5.5.1 General                                     | 5-40 |
| 5.5.2 A4 Microwave Oscillator Phase Lock Control  | 5-41 |
| 5.5.3 A5 Predetection Gain Control                | 5-44 |
| 5.5.4 A6 AGC - RF Overload Detector-Auto Range    | 5-45 |
| 5.5.5 A7 AM and BFO Detectors                     | 5-47 |
| 5.5.6 A8 30 MHz IF Log Detector                   | 5-49 |
| 5.5.7 A9 FM Detectors-Audio and Video Amp         | 5-50 |
| 5.5.8 A10 AM Video- Slideback Pulse-Audio Stretch | 5-54 |
| 5.5.9 A11 LOGIC & SWITCHING CONTROL               | 5-55 |
| 5.6 Harnesses and Interconnection                 | 5-55 |

**Appendix A - Component Location, Parts List, Schematic**

|   |       |
|---|-------|
| A4 - MICROWAVE OSCILLATOR - PLL CONTROL         | A4-1  |
| A5 - PREDETECTION GAIN CONTROL                  | A5-1  |
| A6 - AGC RF OVERLOAD-AUTORANGING                | A6-1  |
| A7 - AM & BFO DETECTORS                         | A7-1  |
| A8 - 30 MHz LOG IF DETECTOR                     | A8-1  |
| A9 - FM DETECTOR-VIDEO&AUDIO AMPL               | A9-1  |
| A10 - AM VIDEO-SLIDEBACK PULSE-AUDIO BTRETCH    | A10-1 |
| A11 - LOGIC&SWITCHING CONTROL                   | A11-1 |
| A12 - SYNTHESIZER 5 (30-50 MHz)                 | A12-1 |
| A13 - SYNTHESIZER 1 (32&125 MHz)                | A13-1 |
| A14 - SYNTHESIZER 2 (100-200 MHz)               | A14-1 |
| A15 - 1MHz DISTRIBUTION                         | A15-1 |
| A16 - SYNTHESIZER 3 (10-20 MHz)                 | A16-1 |
| A17 - SYNTHESIZER 4 (30.2&84 MHz)               | A17-1 |
| A19 - IF Chassis Cards                          | A19-1 |
| A22 - Power Supply                              | A22-1 |
| A23 - IEEE INTERFACE                            | A23-1 |
| A24 - Front Panel                               | A24-1 |
| MW Bracket #1                                   | MW1-1 |
| MW Bracket #2                                   | MW2-1 |
| Top Assembly (Modules, Sub-Assy's, Cables, etc) | TA-1  |
|   | C-1   |

## List Of Illustrations

| <u>Figure</u> | <u>Title</u>                      | <u>Page</u> |
|---------------|-----------------------------------|-------------|
| 1-1           | Model R-1250 Wide Range Receiver  | 1-3         |
| 1-2           | Mechanical Dimensions             | 1-5         |
| 2-1           | Equipment Packaging               | 2-3         |
| 3-1           | Front Panel Nomenclature Location | 3-5         |
| 3-2           | Back Panel Nomenclature Location  | 3-7         |
| 3-3           | Key Pad Nomenclature Location     | 3-11        |
| 4-1           | Simplified Block Diagram          | 4-3         |
| 4-2           | Signal Conversion Diagram         | 4-7         |
| 4-3           | RF Section Signal Flow Diagram    | 4-11        |
| 4-4           | IF Section Signal Flow Diagram    | 4-15        |
| 4-5           | Video Section Block Diagram       | 4-21        |
| 4-6           | Synthesizer Section Block Diagram | 4-25        |
| 4-7           | Digital Section Block Diagram     | 4-31        |
| 4-8           | Power Section Block Diagram       | 4-35        |
| 5-1           | Test Equipment Connection         | 5-5         |
| 5-2           | RF Section Test Point Locations   | 5-17        |
| 5-3           | IF Chassis Terminal Locations     | 5-21        |
| 5-4           | Video Section Test Points         | 5-31        |
| 5-5           | Card Connector Locations          | 5-56        |
| 5-6           | Card Cage Coax Connections        | 5-58        |

## List Of Tables

| <u>Table</u> | <u>Title</u>                        | <u>Page</u> |
|--------------|-------------------------------------|-------------|
| 1-1          | Physical Characteristics            | 1-4         |
| 1-2          | Receiver Specifications             | 1-6         |
| 2-1          | Connector Identification            | 2-6         |
| 2-2          | Fuse Selection                      | 2-7         |
| 2-3          | IEEE-488 Interface Bus              | 2-12        |
| 2-4          | Status/Control Signals              | 2-13        |
| 2-5          | IEEE Function Codes                 | 2-14        |
| 3-1          | Front Panel Nomenclature            | 3-6         |
| 3-2          | Back Panel Nomenclature             | 3-8         |
| 3-3          | Key Pad Nomenclature                | 3-12        |
| 4-1          | Frequency Bands                     | 4-5         |
| 5-1          | Preventive Maintenance              | 5-2         |
| 5-2          | Test Equipment                      | 5-7         |
| 5-3          | Malfunction Location                | 5-8         |
| 5-4          | Maintenance Selection               | 5-9         |
| 5-5          | Test Sequence                       | 5-10        |
| 5-6          | Fault Location, General             | 5-11        |
| 5-7          | Fault Isolation RF Section          | 5-12        |
| 5-8          | Fault Isolation M1 Assembly         | 5-13        |
| 5-9          | Fault Isolation M2 Assembly         | 5-15        |
| 5-10         | Fault Isolation 30 MHz IF           | 5-19        |
| 5-11         | Fault Isolation 200 KHz IF          | 5-22        |
| 5-12         | Fault Isolation 30 MHz Video        | 5-24        |
| 5-13         | Fault Isolation 200 KHz Video       | 5-27        |
| 5-14         | Fault Isolation Frequency Synthesis | 5-33        |
| 5-15         | Card Cage Coaxial Connector List    | 5-60        |
|              | Card Cage Wire List                 | 5-62        |



## **CERTIFICATION**

Dynamic Sciences Incorporated Certifies that this instrument has been designed for operation in accordance with International Safety Requirements, and further certifies that this instrument has met the published specifications in effect on the date of shipment.

## **ASSISTANCE**

Service contracts and/or field engineering assistance agreements are available for products manufactured by Dynamic Sciences Incorporated. For information contact:

Dynamic Sciences Inc.  
7660 Gloria Avenue  
Van Nuys California 91406

TELE: (818) 782-0820  
TWX: (910) 495-1780

## **NOTICE**

*The information in this document is subject to change without notice and should not be construed as a commitment by Dynamic Sciences, Inc. Dynamic Sciences Inc. assumes no responsibility for any errors that may appear in this manual, and reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Dynamic Sciences, Inc. to notify any person or organization of such revision or changes.*

**(THIS PAGE INTENTIONALLY LEFT BLANK)**